

## You Will Need:

- Your Nuc bottom board (between 9 1/4" and 9 1/2")
- Beetle Baffle™ E-Z Narrow Nuc and 4-piece wooden spacer kit for bottom board
- Hammer and 3d box nails or Brad nailer (for spacer strips only)
- Staple gun and T50- 3/8" staples (for metal parts only)

## Installation

1. Install 4-piece wooden spacer kit so it is centered on the width of bottom board. If it is slightly wider or narrower than the width of the bottom board, center it before attaching. Use nails, brads, or staples (Figure 1). Ensure all outside corners of the spacers meet evenly.
2. Place metal Side Rails (longer strips) atop the spacer strips with angled edges pointing down (Figure 2).
3. Place the End Rails (shorter strips) with angled edges pointing down. End Rails will overlap Side Rails (Figure 3). Staple or nail End Rails and Side Rails in place with three fasteners (staples, nails, or brads) on each rail.



Fig. 1—Spacer Strip Installation  
Standard bottom board shown



Fig. 2—Side Rail Placement  
Standard bottom board shown

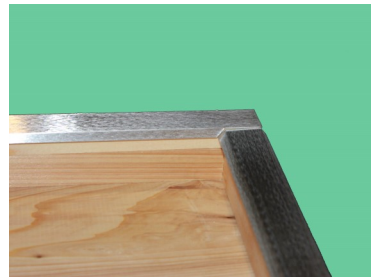


Fig. 3—End Rail Placement  
Standard bottom board shown

**NOTE:** For hives of other widths, we recommend using one of our other Nuc versions.

Visit [beetlebaffle.com/store](http://beetlebaffle.com/store) for more information.

## Questions or Comments?

If you have any questions or comments about the Beetle Baffle™ or its installation, e-mail us at [service@beetlebaffle.com](mailto:service@beetlebaffle.com).



[www.beetlebaffle.com](http://www.beetlebaffle.com)